



## **LCI WIRELESS SYSTEM OPERATION INSTRUCTIONS -** **SEQUENCE OF OPERATION**

### **To turn wireless system on:**

Push and release LCI button (1).

Push and release ON button (2).


System is now on and all functions can be operated

### **To turn wireless system off:**

System will turn off automatically after 5 minutes.

Push and release LCI button (1).

Push and release ON button (2) system will turn off immediately.

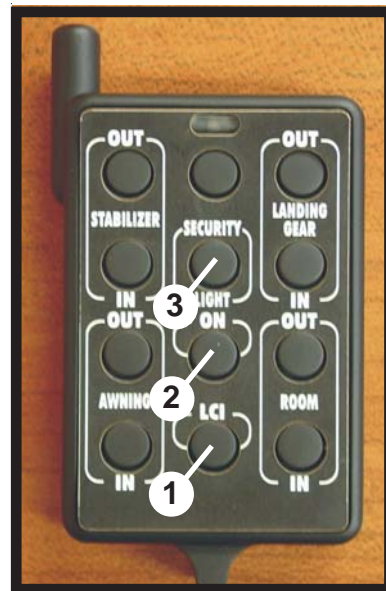

### **Security Light:**

Security light will turn ON or OFF independent of the system being ON or OFF.

Security light can be turned ON or OFF by pushing the security button (3).

Caution: Security light will not turn off automatically.

**These instructions can be found on the back of each wireless remote control.**



**NOTE:** LEAVING SECURITY LIGHT ON FOR EXTENDED PERIODS OF TIME WILL DEplete BATTERY POWER.




## **PROGRAMMING THE TRANSMITTER**

PUSH AND HOLD BLUE RESET BUTTON (A) ON WIRELESS REMOTE MODULE FOR APPROXIMATELY 5 SECONDS UNTIL RED LIGHT (B) ILLUMINATES.


PUSH AND HOLD ANY BUTTON ON THE TRANSMITTER FOR APPROXIMATELY 3 SECONDS UNTIL THE RED LIGHT BEGINS TO FLASH RAPIDLY AND THEN THE LED WILL GO OUT. TRANSMITTER IS READY FOR USE.



## LCI WIRELESS SYSTEM OPERATION INSTRUCTIONS - KEYSTONE VARIATIONS - MONTANA

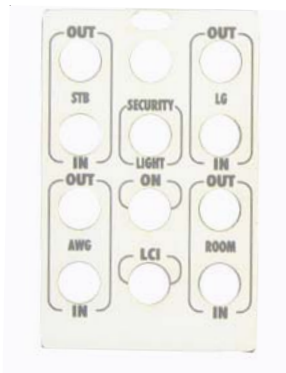

**P/N - 205923 MONTANA**  
TRANSMITTER LABEL - 194231  
RECEIVER LABEL - 183738

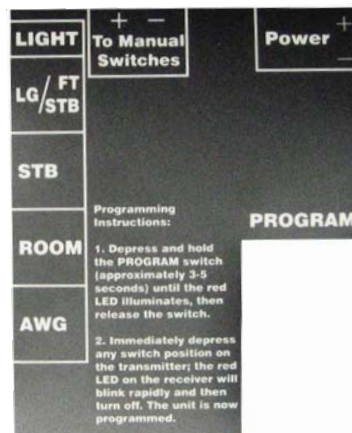

**P/N - 183688 DUAL M/IRC**



**P/N - 183689 TRIPLE M/IRC**



**P/N - 183690 QUAD M/IRC**





## LCI WIRELESS SYSTEM OPERATION INSTRUCTIONS -


### KEYSTONE MODELS - (NOT TO SCALE)



#### **P/N - 191454 COUGAR**

TRANSMITTER LABEL - 194230


RECEIVER LABEL - 183743

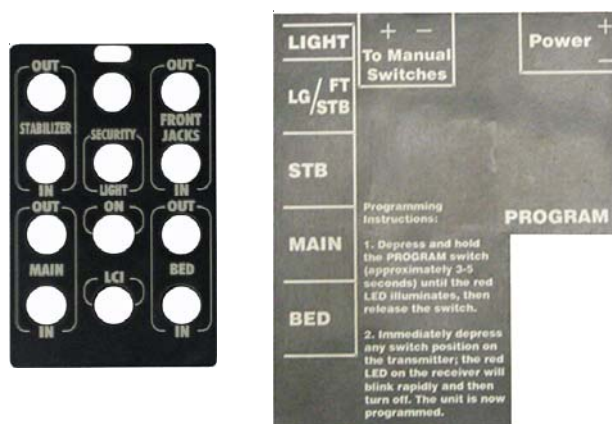

#### **P/N - 198865 VR1**

TRANSMITTER LABEL - 198864


RECEIVER LABEL - 198863

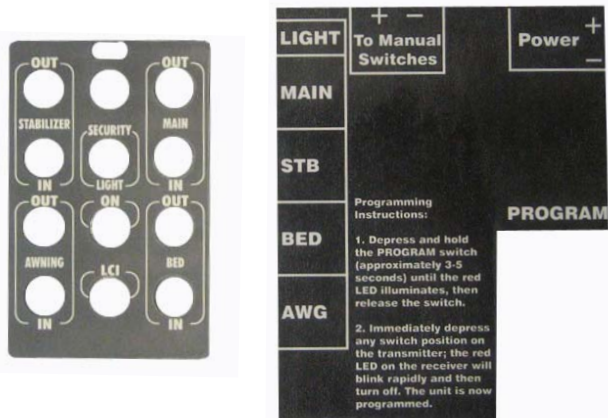

#### **P/N - 196608 X-LITE**

TRANSMITTER LABEL - 196211

RECEIVER LABEL - 196212

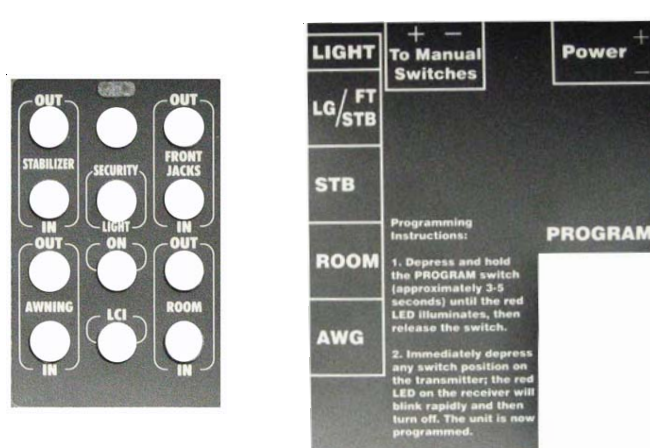

#### **P/N - 191456 SPRINTER**

#### **P/N - 183884 FUZION - RAPTOR**

TRANSMITTER LABEL - 194228

RECEIVER LABEL - 183738

#### **ALL UNITS**

TRANSMITTER - 183734

RECEIVER - 183744





## **LCI WIRELESS SYSTEM OPERATION INSTRUCTIONS - TROUBLESHOOTING**

If the WIRELESS SYSTEM is inoperative, troubleshooting can be performed fairly quickly.

1st - Check the battery in the REMOTE. Replace if necessary.

2nd - Check for POWER into the receiver. If there is no POWER, check the protection device on the positive wire feeding the receiver. Reset or replace the protection device.

3rd - When POWER into the receiver is established, check for POWER out to the MANUAL SWITCHES. The positive wire also has a protection device inline. If there is no power out to the MANUAL SWITCHES, reset or replace the protection device.

4th - Reprogram remote to the receiver. See page 1.

5th - If system is still inoperative, replace receiver. See pages 2 & 3 for the specific models. To order the needed part(s). The receiver label must be accurately identified. The receiver is common to all units.

**NOTE:** LEAVING SECURITY LIGHT ON FOR EXTENDED PERIODS OF TIME WILL DEplete BATTERY POWER.