



## Passcode

1. Select "Menu".




2. Press "Passcode" to enter passcode setup.

Generator	No	
Fuel Station	No	Status
Fresh Water Tank 2	No	Bluetooth
Black Water Tank 2	No	Passcode
Gray Water Tank 2	No	Reset
Gray Water Tank 3	No	Brightness
■ Awning 1	No	Info
■ Awning 2	No	Setup
■ Hydraulic Slide Room	No	

2.1 Enter the correct passcode to proceed.



3. The passcode setup window will open. (Passcode protection may be disabled by selecting Change Passcode then Disable).

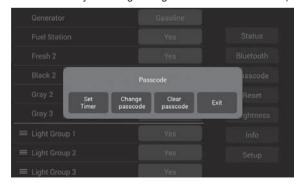





3.1 Passcode protection may be disabled by selecting Change Passcode then Disable.

