

## DIGIT DISPLAY MODELS



**Fault Codes  
are Displayed  
here**

<b>F01</b>	<b>Motor triac short circuit:</b> Check motor and module connections
<b>F02</b>	<b>Motor jammed / tacho detached:</b> Check motor and module connections
<b>F03</b>	<b>NTC short/open circuit:</b> Check thermistor and module connections
<b>F04</b>	<b>Pressure switch jammed on empty:</b> Check switch and module
<b>F05</b>	<b>Pressure switch jammed on full or pump blocked:</b> Check pump and switch
<b>F06</b>	N/A
<b>F07</b>	<b>Heater relay stuck:</b> Check heater and module connections
<b>F08</b>	<b>Heater relay stuck:</b> Check pressure switch, heater and module connections
<b>F09</b>	<b>Setup error:</b> Check Eeprom
<b>F10</b>	<b>Pressure switch not sensing:</b> Check switch and module connections
<b>F11</b>	<b>Pump cannot be activated:</b> Check pump, connections and wiring
<b>F12</b>	<b>No communication between cards:</b> Check module connections
<b>F17</b>	<b>Door lock error:</b> Check door, door lock and module connections
<b>F18</b>	<b>Communication error (3 phase motor):</b> Replace power board