


Step 1

Measure the center to center distance between the pucks in the truck bed. If less than 991mm, the shim kit is not needed.

Using this measurement, determine the number of shims required from the table below.



Measured Puck Width

+1 shim	39-1/16" (992mm) to 39-1/4" (996mm)
+2 shims	39-1/4" (997mm) to 39-7/16" (1001mm)

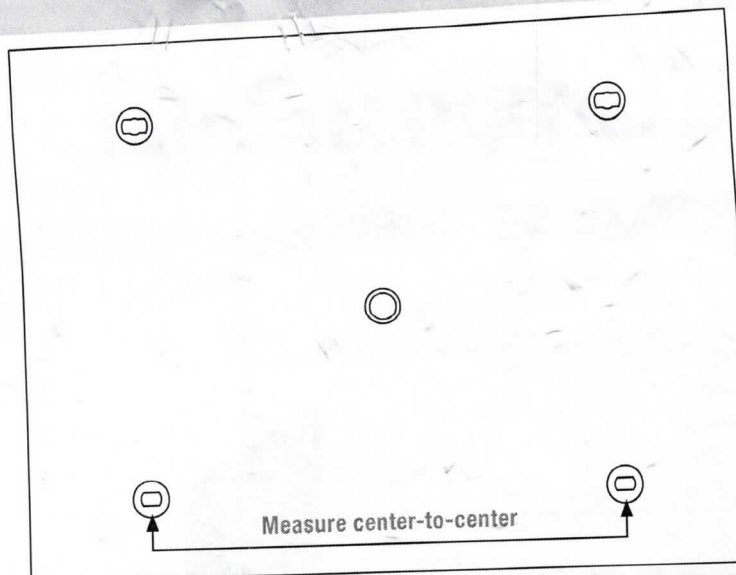

Step 2

Install the shim(s) between the 5th wheel head and leg(s), using the bolts provided in the shim kit.

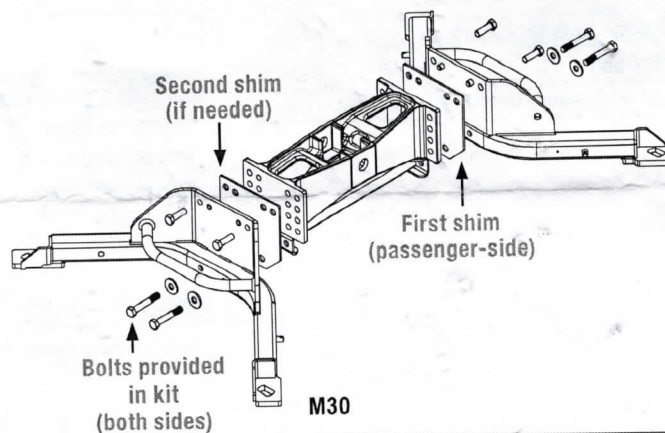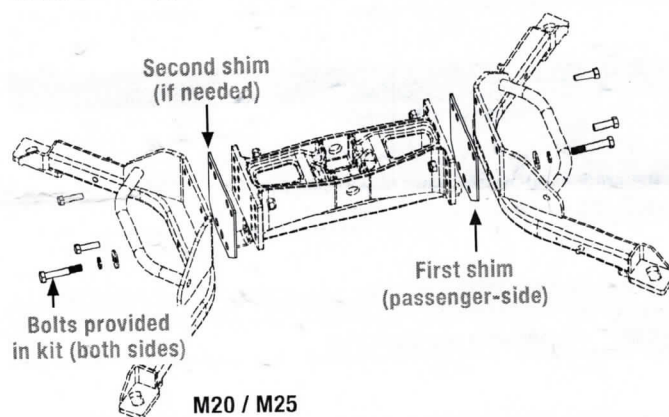

Step 3

Continue following the instructions provided with the original 5th wheel assemblies.

